

REFER TO PARAPET
AND WALL DETAIL
FOR TERMINATION


EVERGUARD®
PREFORMED
CORNER

REINFORCED
EVERGUARD® MEMBRANE


NOTE:

1. FLASHINGS MAY BE ADHERED OR INSTALLED DRY. SEE SPEC FOR DIRECTIONS.
2. KEEP FASTENERS BACK FROM CORNER 6" (152 mm) MAX. IN BOTH HORIZONTAL AND VERTICAL APPLICATIONS.

STEP 1

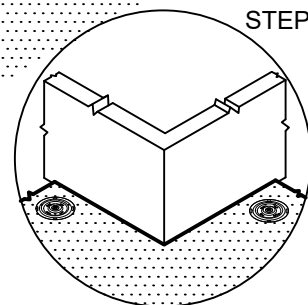

STEP 2

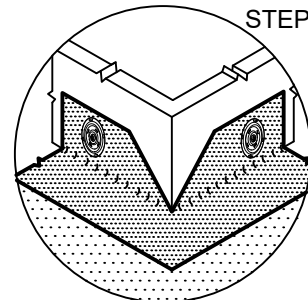

ALTERNATE
WALL/CURB ATTACHMENT

GAF

OUTSIDE CORNER REINFORCEMENT - PREFORMED CORNER DETAIL

DRAWING #
329A

THIS DETAIL APPLIES TO:
ALL SYSTEMS

ISSUE / REVISION DATE
8/24/20

SCALE
N.T.S.

LEGEND

 HEAT-WELDED