




EverGuard® SA TPO

Self-Adhered Single Ply Roofing System

ALTERNATE INSTALLATION (SEE NOTE #3)

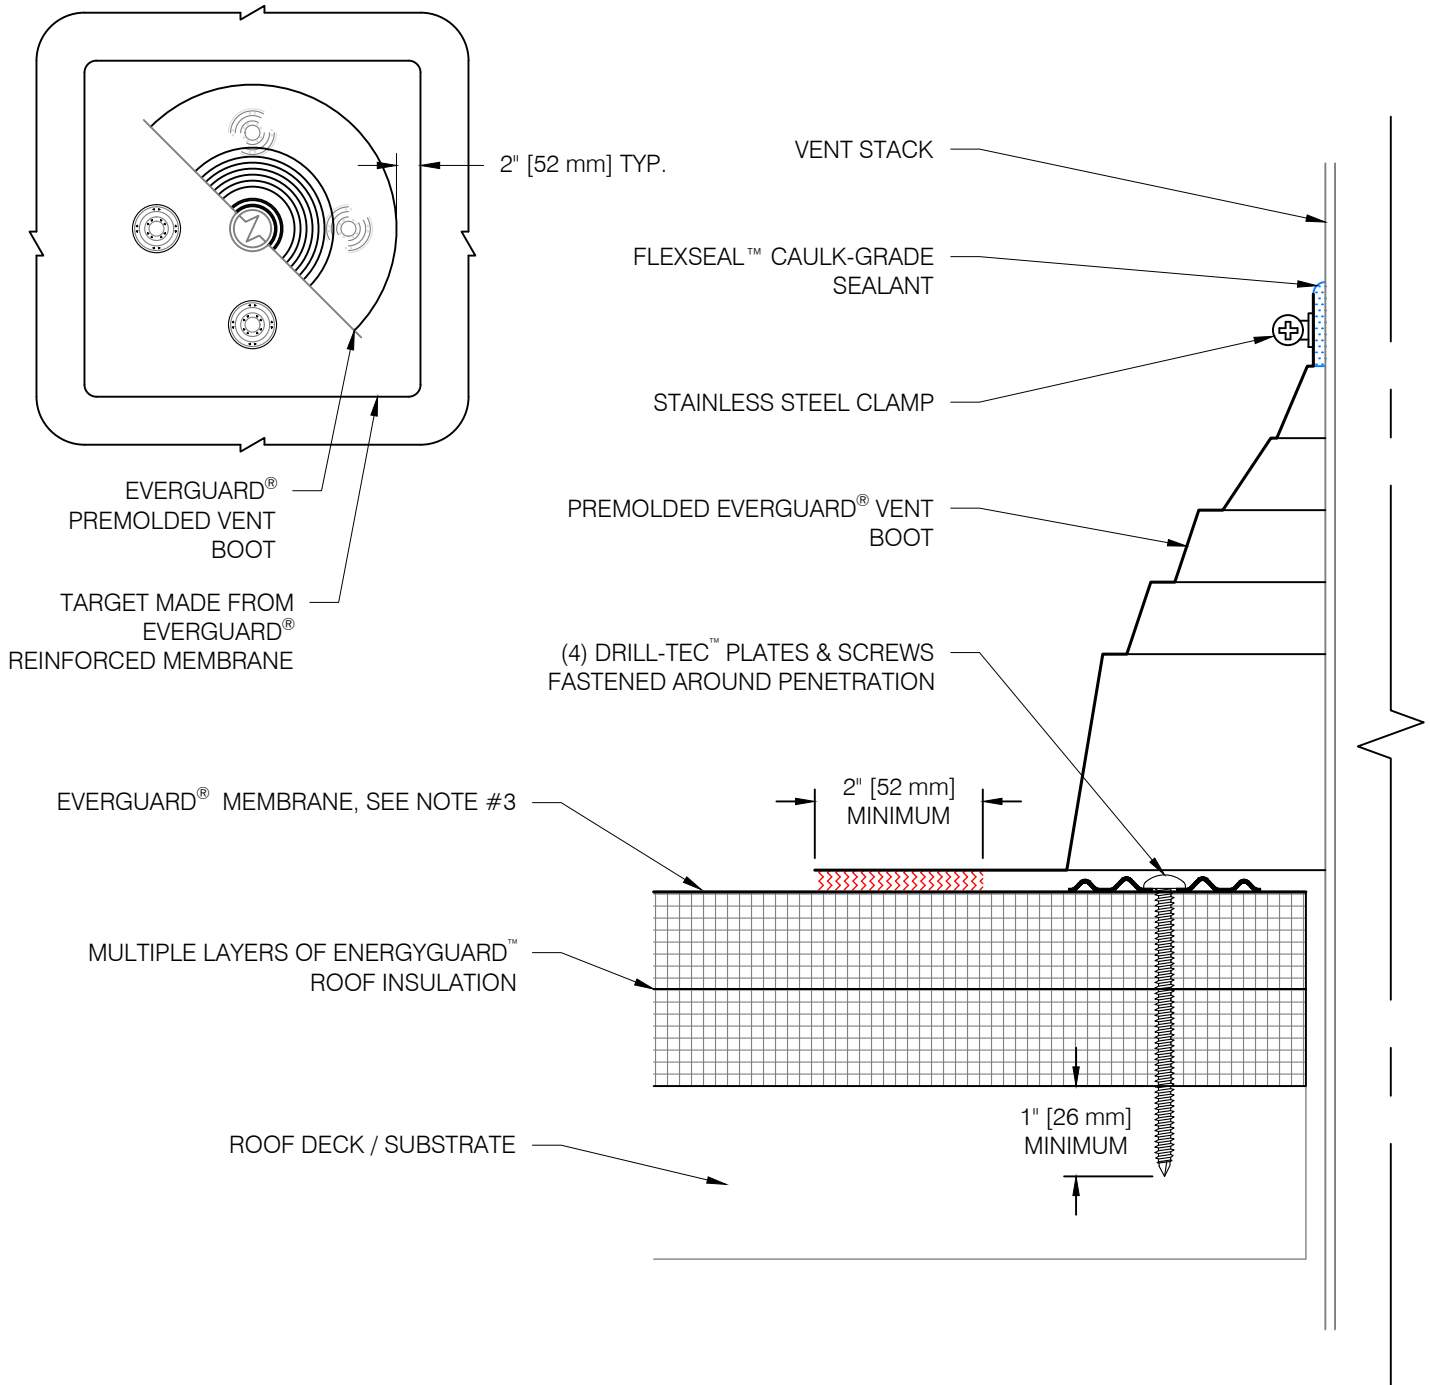

NOTES:

- DO NOT CUT THROUGH THE SIDE OF THE PREMOLDED BOOT; IT MUST BE INSTALLED OVER THE VENT PIPE.
- FOUR DRILL-TEC™ PLATES & SCREWS MUST BE FASTENED AROUND PENETRATION.
- IF THE PLATES AND FASTENERS INTRUDE INTO THE BOOT FLANGE AREA, THEN A TARGET MUST BE FIRST INSTALLED OVER THE PLATES AND FASTENERS PRIOR TO BOOT INSTALLATION.

LEGEND		PREFORMED VENT BOOT			DETAIL
	HEAT WELD				506A
	SEALANT				
		ROOF AREA	ISSUE DATE	SCALE	
		PENETRATIONS	05/17/22	6" = 1'	